



INSTALLATION OF KrosLOCK TILE AGAINST A VERTICAL SURFACE (CONCRETE CURB, WALL OR TIMBER)

P.O. BOX 239, 4393 DISCOVERY LINE PETROLIA, ONTARIO NON 180

PHONE: (800) 263 - 2363 PHONE: (519) 882 - 8799 FAX: (519) 882-2697 EMAIL: alltinfo@sofsurfaces.com

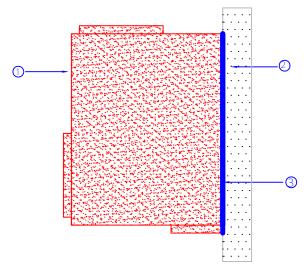

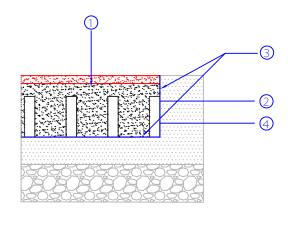

LEGEND:

- ① SofTILE (See Specifications for Thickness and Color).
- 2 Vertical Surface (Curb, Wall or Timber) See Specifications for Details.
- 3 Applied Adhesive (See Installation Instructions Below).
- 4 Window and Door Spray Foam May Be Applied If Extra Support is Required

THICKNESS	CRITICAL FALL HEIGHT (FT) CRITICAL FALL HEIGHT (FT)			REVISIONS						
	WITH 10 YEAR PERFORMANCE	WITH 10 YEAR PERFORMANCE	REV	ORIGINAL ISSUE ADJUSTED ADHESIVE APPLICATION			DATE	APPR		
	WARRANTY PLUS SERIES	WARRANTY PREMIUM SERIES (EPDM)	0				ON	12/17/03 10/20/04		
2.00"	4.0	4.0	2	REVISED		02/02/06				
3.00"	5.0	5.0	3 4	REVISED REVISED			08/14/08 06/02/09			
3.50° 4.00°	7.0 8.0	7.0 8.0	SIZE	FSCM NO.		DWG NO.			REV	
4.25'	10.0	10.0	A			1SK5			4	
FILE NAME A0001SK5 PREPARED BY B.GOSS		SCALE	SCALE		NTS SHEE		ET			